

Step 01

PREPARATION OF POOL

Drain pool level so water level is 50mm above the bottom of the skimmer box.

Clean inside face of fibreglass pool to ensure good adhesion.

NOTE: Shell must be clean, dry and free from dust and mould residue.



Step 02

INSTALLING THE PLUMB STRIP

Cut 12" of extender strip to use as a guide.

Offer up plumb strip to inside edge of pool using a piece of extender strip as a guide.

Using small screws, screw strip every 300mm into top of pool to secure to PoolEdge.



Step 03

SETTING THE FORM

Peel the paper from the double faced tape (one foot at a time) and stick the form to the fibreglass ensuring the foam is hard up to and follows the plumb strip.

To cut into corners, cut to the shape of the corner and use a sanding block to sand foam until it fits perfectly.


BENDING INSTRUCTIONS:

Using the glass tape provided, apply to the backside of the bend to allow bending.

NOTE: During cold weather it may be necessary to warm the pool face with a heat gun just prior to sticking the form. Slightly warming the glue on the foam will also work well (be careful not to melt the foam).

Step 03 (Continued)

SETTING THE FORM

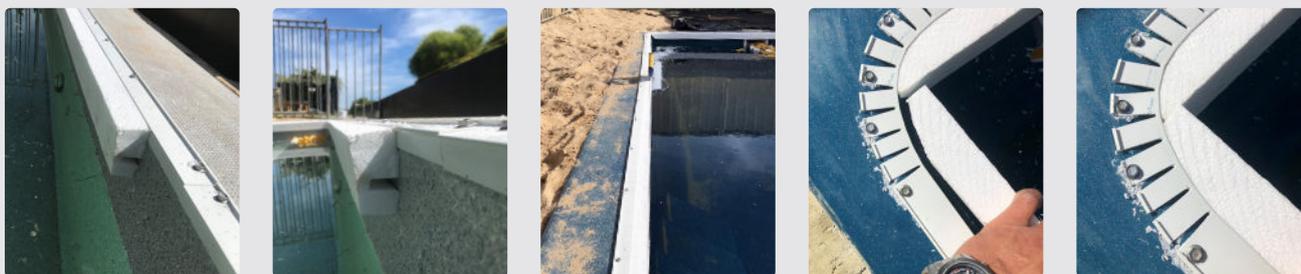

Step 04

ATTACHING FACE PIECE

Peel the brown paper on the double-faced tape (one foot at a time). Then line up with the recessed edge to the bottom of the extender.

Pat the face piece with a flat palm to ensure good adhesion. In cold weather you can heat glue carefully with a heat gun.

NOTE: You can tape across joins to ensure they do not move apart when pouring.



Step 05


PLACING THE TIE WIRES

Thread the washers onto the ties.

Using the screws provided, screw form into the fibreglass 100mm back from form with 280mm – 300mm spacings. Also make sure there is one either side of the joins.

Push wires through face piece at the top of the extender strip and pull taught and wrap around the screws.

NOTE: Ensure washers are threaded onto ties before commencing.

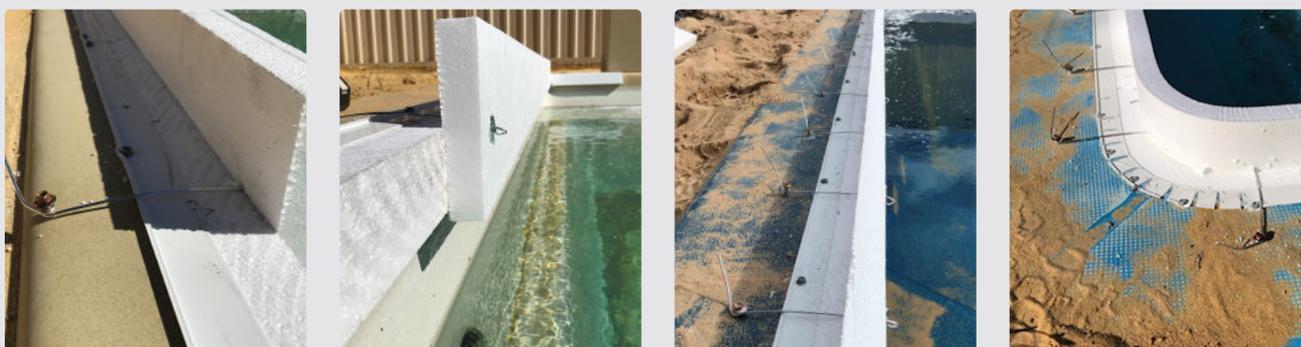

Step 06

POURING

Be sure to vibrate the form while pouring to help eliminate any rock pockets or air bubbles. This will prevent honeycombing.

Be sure to keep concrete as close to the height of the form as possible (too much may result in the form moving).



Step 07

STRIPPING/FINISHING - *This must be done on day of pour*

When concrete is set enough to finish on knee boards, the ties can be removed.

Remove the tie wires by twisting the “pig tail”, severing the wires 50mm inside the concrete.

Peel the pool face off by applying both hands, one on top and one below; pulling in one smooth action. The foam will then come away easily.

NOTE: *Removing the forms one section at a time retains moisture in the surface, allowing adequate time to finish concrete.*

REMOVING EXTENDER STRIP - *Can be done day after pour*

Break away a corner of the foam, revealing the two strips stuck to the top of the pool.

Peel off whilst pushing downwards from behind foam. This will result in easy removal.

NOTE: *To clean any residue you can use a plastic scourer (Bunnings cleaning section) and a bucket of water.*

